

# Outdoor GPS Device

## Navilock NL-1250 Pro-Tripper

### Quick Start Guide



- POWER / LIGHT ①
- Mark: W.P. / ESC ②
- FIND WAYPOINT ③
- ④ TRACK BACK
- ⑤ SCROLL
- ⑥ OK

# NAVILOCK®

www.navilock.com

### How to Start a Route?

1. Press **3** button to select the route you've planned on PC software (Travel Manager)
2. To select the route files for traveling.
3. Select with **6**, if you want to add, remove or edit route waypoint. Otherwise go to "Follow".
4. Select if you want go forward or backward.
5. The display will show direction and remain distances and needed time to destination accordingly.
  - Solid arrow means system is at e-compass mode.
  - Blink arrow means system is GPS fix and at e-compass navigation mode.
6. After press OK, you see a map of your planned route. The small arrow show your moving direction, the big on the right, the small direction to the next route waypoint.
7. When near to destination, system will advise you, if you want to stop during duration, press **8** button, system will ask if you want to exit route or not.

### How to Find Waypoint?

1. Press **8** button to choose the waypoint you've saved to.
2. Press **OK** button to choose the waypoint you've saved.

**Was ist GPS?**

GPS stands for Global Positioning System. For 3D fix, we need at least four satellites. Normally the accuracy of GPS under open sky which means no tall building and clear sky is within 10 meters per second. Therefore, if the device shift 10 meter at that second, the device may shows 36 kilometer per hour instant speed. Nowadays, the GPS consumer product has built in adjust algorithm and assisted method to extend capability of GPS.

### Was ist IPX4?

The IPX4 waterproof standard is for device to protect against splashing water without any adverse effects. However, it does not protect against submersion. The standard does not affect the accuracy of GPS. Waterproof provides protection for under raining weather and spray water. The consumer usually misunderstands the waterproof standard of IPX4 and misuses the IPX4 device with water activities like swimming. However, the pressure of swimming usually exceeds IPX4 standard.

SUITABLE	UNSUITABLE
WATER RESISTANCE	

Navilock while water is being splashed but not under any pressure.

### Note!!

- △ Do not near fire or lay on magnetic source avoiding e-compass aging.
- Please fully charge before first use.
- Considering waterproof, no decompose by yourself.
- Please wipe USB connect inside before charging and plugging to prevent damage device.

### Symbol Explanations

- GPS status indicator
- None: No signal
  - Solid: 3D fix
  - Solid with 1 bar: 3D fix with poor signal
  - Solid with 2 bar: 3D fix with good signal
  - Solid with 3 bar: 3D fix with strong signal
- Battery capacity indication
- E-Compass status indicator
  - Blinking: E-Compass got magnetic interference or unstable, it needs to calibrate at this situation.

3. The display will show the direction and remain distance and time needed to destination.
4. If you press the OK key, you see a map. The small arrow show your moving direction and the big on the right, the direction to the waypoint.

### Hot Key for the Settings

1. On compass screen, press **8** + **6** simultaneously
  2. The setting information is including:
    - Compass Setting
    - Setup Time
    - Display Setting
    - About
    - GPS Setting
    - Route Setting
    - Unit Setting
- Notice:** You can set the time zone, check GPS receiving status at this page and set contrast of display, the most items are not necessary to change.

### Hot Key for E-Compass Calibration

1. On compass screen, press **8** + **OK** simultaneously.
  2. Follow the instruction to calibrate X & Y axis first.
  3. Calibrated X & Y axis, continue to calibrate Z axis.
  4. Press **OK** will return to compass display.
- Notice:** Usually, system will calibrate e-compass automatically after power on. It doesn't need to have a calibration every time, unless got magnetic interference or base on particular request.

