

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

1 INTRODUCTION

The GNS1301 module utilizes the new generation MediaTek MT3333 GNSS chip that supports GPS and GLONASS simultaneously. Upgrading firmware, GNSS systems like GALILEO can be supported. Choosing the preferred GNSS system, GPS+GLONASS or GPS+GALILEO GNSS signals can be handled.

Due to its capability to use GLONASS and GPS at the same time, GNS1301 benefits from the higher availability of satellites in critical environments. The navigation performance and accuracy is further improved by using the correction data from SBAS (WAAS, EGNOS, GAGAN, MSAS), QZSS or DGPS(RTCM).

First Fixes after just a few seconds are achieved with the help of A-GPS using EPO™ (Extended Prediction Orbit) and the EASY™ "self generated orbit prediction" algorithm. EASY™ (Embedded Assist System) does not require any resources or assist data from the host.

The excellent low power design makes it easy to implement this module in power sensitive, battery supplied applications. The new AlwaysLocate™ power management feature will improve this behaviour additionally. It adaptively adjusts power consumption depending on the environment and motion conditions, in order to achieve a balance between fix rate, power consumption and position accuracy.

Very low power requirements (typ 66mW@ 3.3V) and internal voltage regulator makes it easy to run the module with various power supplies and allows direct connection to LiIon batteries.

GNS1301 offers the industry's highest level of navigation sensitivity up to -165dBm. It has superior dynamic performance at high velocity and provides effective protection against interference signals using MTAIC™ (Multi-tone active interference canceller). Up to 12 independent channel interference continuous wave jammers <-80dBm can be eliminated or reduced.

The embedded logger function LOCUS with a 16-hrs on chip memory makes this GNSS module a complete track logger for many applications. With AlwaysLocate™ data logging can be achieved up to 32-hrs under standard conditions.

In professional timing applications the outstanding high accuracy PPS (pulse per second) hardware pin is used for synchronization to GPS second. Typical accuracy is 10ns.

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

Features

- GLONASS and GPS simultaneously, GALILEO ready
- 99 acquisition-/ 33 tracking channels
- Ultra high tracking/navigation sensitivity: -165dBm
- Extremely fast TTFF at low signal level
- QZSS, SBAS (WAAS, EGNOS, MSAS, GAGAN) or DGPS (RTCM) correction support
- A-GPS by EPO "Extended Prediction Orbit"™ enables 7/14 days prediction
- 12 Multitone Active Interference Canceller (MTAIC) for GPS-in-band jammer rejection
- EASY™ : Self generated orbit prediction support
- AlwaysLocate™ : Intelligent Algorithm for power saving
- Embedded logger function
- High accuracy 1PPS output
- NMEA-0183 or binary protocol
- High update rate (up to 10/s)
- GPS+GLONASS Consumption current(@3.3V):
Acquisition: 35mA Typical
Tracking: 22mA Typical
- Low backup current consumption 15uA, typical
- SMD type with stamp holes
- Small form factor: 11.5x13x2.1 mm
- CE, FCC and RohS certified

Applications

- Navigation
 - In-vehicle Navigation equipment
 - Dynamic Navigation
 - Portable ("nomadic") devices
 - Netbooks, tablet PCs and mobile phones
- Timing
 - Precision timing via GPS
- Location based applications
 - GPS Logger
 - GPS Tracker
 - Security devices
 - Camera equipment
 - Geofencing

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

2 INDEX

1 INTRODUCTION	1
2 INDEX	3
3 FUNCTIONAL DESCRIPTION	4
3.1 Block diagram	4
3.2 System description	4
3.3 GPS and GLONASS simultaneous operation	5
3.4 Power Management Features	5
3.5 Logger function	7
3.6 Active interference cancellation (MTAIC)	7
3.7 AGPS with EPO™ data	8
3.8 EASY™ self generated prediction data feature	9
3.9 Pulse Per Second (PPS)	9
3.10 SBAS (Satellite Based Augmentation) support	10
3.11 DGPS (Differential GPS) support	10
3.12 Single sentence output	10
3.13 Last position retention	10
3.14 Geofencing function	10
3.15 Distance calculation feature	11
3.16 Magnetic variation feature	11
3.17 GPS almanac and ephemeris data	11
3.18 Real time clock (RTC)	11
3.19 UART interface	11
3.20 Module default settings	11
4 TYPICAL APPLICATION BLOCK DIAGRAM	12
4.1 Typical System overview	12
5 GNSS characteristics	13
5.1 GNSS characteristics	13
6 DESIGN GUIDELINES	14
6.1 General	14
6.2 GPS and GLONASS antenna	14
7 ELECTRICAL SPECIFICATION	15
7.1 Absolute Maximum Ratings	15
7.2 Recommended Operating Conditions	15
7.3 GPS/GLONASS input characteristics	15
8 DEVICE PINOUT DIAGRAM	16
8.1 Pin configuration	16
8.2 Pin assignment	17
9 NMEA DATA interface	18
9.1 NMEA output sentences for GPS and GLONASS	18
9.2 NMEA command interface	19
10 PHYSICAL DIMENSIONS	20
11 RECOMMENDED PAD LAYOUT	21
12 MATERIAL INFORMATION	22
13 RECOMMENDED SOLDERING REFLOW PROFILE	22
14 TRAY PACKAGE INFORMATION	23
15 TAPE&REEL INFORMATION	23
16 ORDERING INFORMATION	24
17 FCC AND CE COMPLIANCE	25
18 ENVIRONMENTAL INFORMATION	25
19 MOISTURE SENSITIVITY	25
20 DOCUMENT REVISION HISTORY	25
21 RELATED DOCUMENTS	26


GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

3 FUNCTIONAL DESCRIPTION

3.1 Block diagram

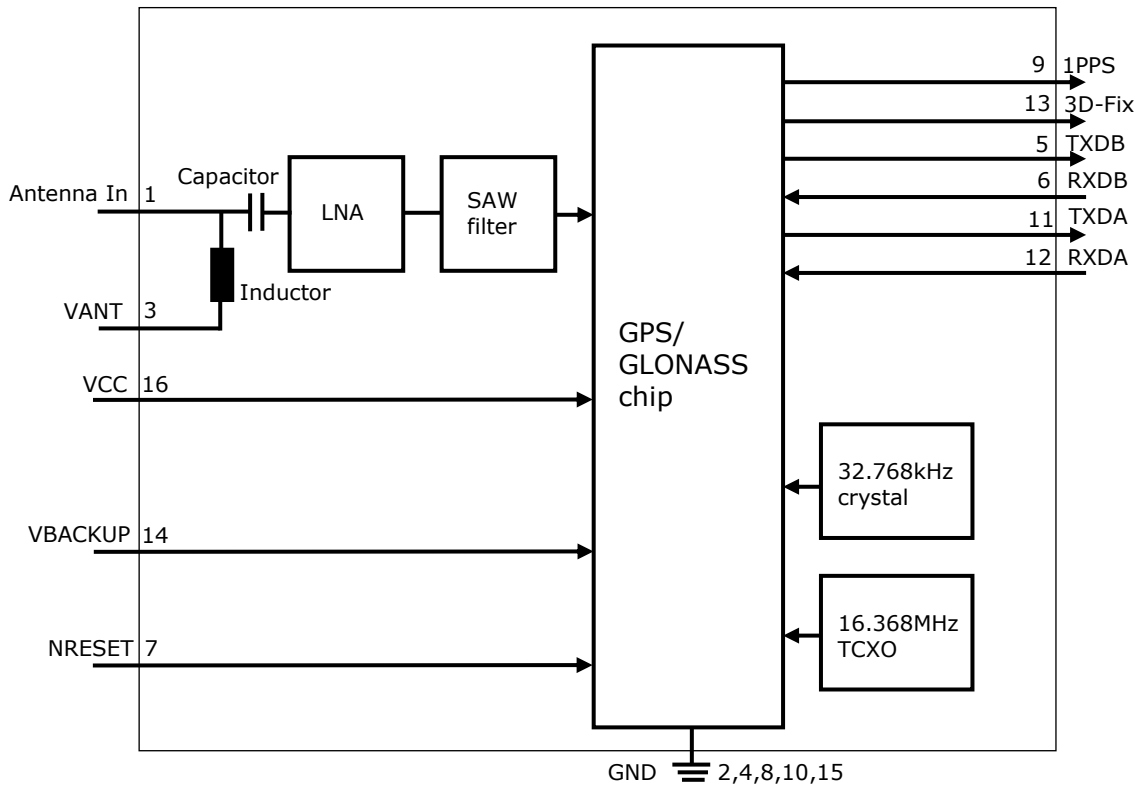

3.2 System description

The GNS1301 core is a high performance, low power GPS and GLONASS receiver with Galileo option that includes an integrated RF frontend. The receiver can process both GNSS systems simultaneously, which improves the availability of usable satellites in critical reception scenarios. Due to high input sensitivity and integrated low noise amplifier (LNA), it can work directly with a passive antenna.

GNS1301 is a complete GNSS engine, including:

- Full GPS and GLONASS processing without any host processing requirements
- Standard NMEA message output
- A powerful command and control interface
- All clock sources integrated on module
- RF frontend for direct connection of passive or active antennas
- Rich additional features like complete logger, geofencing, single sentence output, last position retention and magnetic variation
- Interfaces for DGPS, PPS, Fix Status Indicator

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

3.3 GPS and GLONASS simultaneous operation

GNS1301 supports tracking of the GPS and the GLONASS satellite system at one time. This feature enhances the overall performance significant.

- Increased availability of number of satellites
- Increased spatial distribution allows better geometrical conditions
- Reduced Horizontal (HDOP) and Vertical Dilution of Precision (VDOP) factors

In GPS-only operation, a minimum of 3 SVs is needed to determine a 2D position fix solution. When using both systems, 5 SVs are needed to determine the four unknowns and one more SV to calculate the GPS/GLONASS time offset.


Using a combined receiver, users have an access to potentially 48 or more satellites. This high number of satellites can overcome the typical problems of restricted visibility of the sky, such as in urban canyons or indoor scenarios.

3.4 Power Management Features

Power management schemes implemented for any GPS system requires an optimally tuned performance for both accuracy of the position fixes and the average power consumed for best user experience. GNS1301 architecture achieves these both aspects by providing flexibility and design choices for the system integration, based on wide range of use cases and by leveraging on the proven silicon methodologies. Also GNS1301 provides position, velocity and time measurements without any host loading. This, coupled with the optional built-in power management options, reduces the overall system power budget.

Selectable Power management features:

- In **Standby mode** RF frontend and internal MPU are switched to deep sleep state. Power consumption is reduced to 0.6 mW (200µA). This state can be entered by sending the NMEA command: \$PMTK161,0*28<CR><LF>. Leaving standby mode and resuming to normal operation will be managed by sending any byte to the module.

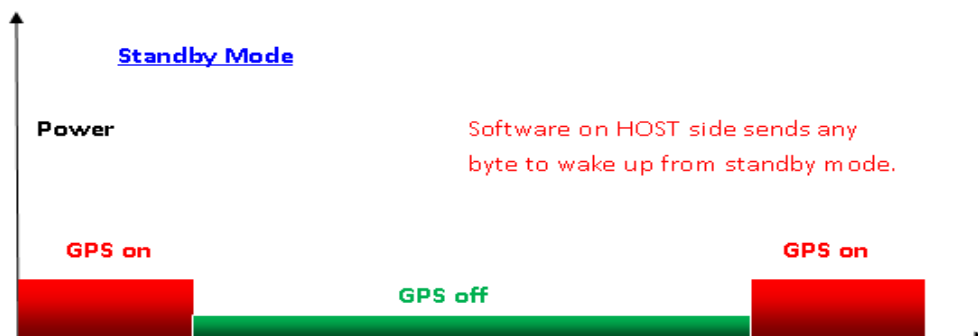


GPS & GLONASS module GNS 1301


Datasheet V1.4

confidential information *preliminary specification*

- **Backup mode** can be entered by sending NMEA command: \$PMTK225,4*2F<CR><LF>. The GPS core will shut down autonomously to backup state, Vcc supply can now be switched off by an external power supply switch.
- **Periodic mode** describes a power mode, which will autonomously power on/off the module in programmable time slots with reduced fix rate. Periodic mode is useful during stationary operation or if position fixes are just needed from time to time. Since power consumption in **GPS off** times is nearly zero, the power consumption in periodic mode can be estimated by $P_{\text{tracking}} * (t_{\text{on}} / (t_{\text{on}} + t_{\text{off}}))$. Periodic mode is controlled with NMEA command \$PTMK225. See document *GNS1301NMEACommandInterface manual* for programming details.

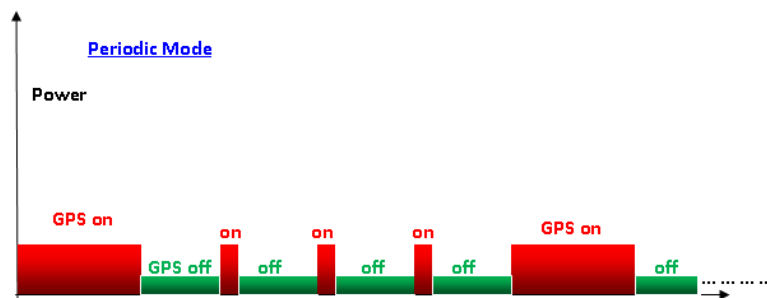

- **AlwaysLocate™** feature provides an optimized overall GPS system power consumption in tracking mode under open sky conditions. Always Locate is an intelligent control of periodic mode. Depending on the environment and motion conditions, GNS1301 can adjust the on/off time to achieve balance of positioning accuracy and power consumption. The best power saving will be made under good reception in stationary mode. Critical reception conditions and dynamic movements will need full activity of the GNSS engine which causes nominal power requirements (29mA typ in tracking mode).

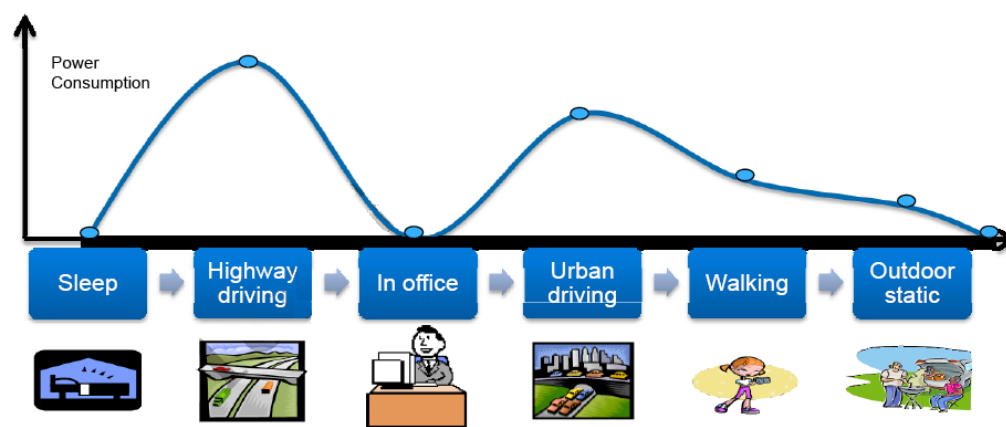

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

3.5 Logger function

GNS1301 provides an autonomous logger function that automatically stores position information in an internal 128kB flash memory. A complete tracking unit can be realized without any external CPU or memory.

The parameters for logging are programmable via the NMEA command interface. The following parameter can be set to optimize logging time:

- logger rate

The commands for logger include:

- start logging
- stop logging
- erase memory
- readout memory

please refer to the *GNS1301NMEACOMMANDINTERFACE manual* for details.

Internal Logger Function					
Logger data rate	1/15		1	1/s	
Logger data memory		128		kBytes	Flash memory
Logger trigger		programmable			Logger can be triggered on various events

3.6 Active interference cancellation (MTAIC)

Because different wireless technologies like Wi-Fi, GSM/GPRS, 3G/4G, Bluetooth are integrated into portable systems, the harmonic of RF signals may influence the GPS reception.

The multi-tone active interference canceller can reject external RF interference which come from other active components on the main board, thus improving the performance of GPS reception.

GNS1301 can cancel up to 12 independent continuous wave (CW) channels having signal levels of up to -80dBm. The functionality is enabled by default and increases power consumption by about 1mA.

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

3.7 AGPS with EPO™ data

AGPS (assisted GPS) allows to shorten TTFF (TimeToFirstFix) by injecting ephemeris data from an external source into the module's memory. With the help of these data, the module does not need to acquire satellite positions by receiving the data from the satellites.

Depending on time and position information that is still available in the module memory, the TTFF can be reduced to just a few seconds.

The GNS AGPS service is based on a short term predicted data service. The predicted data will be fully processed by the GPS engine, the host must load the data from the web and transfer them over the UART to the module:

1. Check GNS1301 module EPO data for validity by comparing the time. (time parameters for existing 1301 data can be retrieved through a NMEA command)
2. Connect to web server through network connection (GPRS, WLAN, LAN,...)
3. Download file. There are just two files, covering all GPS satellites. The first file (MTK7d.EPO) is for 7 days (53kB), the other is 106Kbytes for 14 days (MTK14d.EPO)
4. "Parse" file, using software example. This is quite easy, there must be added some header bytes and a checksum and a control counter. GNS offers software support on this.
5. Download to 1301 module. please refer to the *GNS1301NMEACommandInterface manual* for details

If the host has low memory available, there's no need to save the whole file. The steps 3..5 can be done frame by frame needing less than 2kBytes of buffer memory.

Code samples and support for several platforms are available from GNS (in preparation)

Thanks to the predicted system, download data stay valid for up to 14 days. Therefore, users can initiate the download everytime and benefit from using (W)LAN instead of using expensive GSM. File size will be ~50kBytes for a one week prediction data set.

AGPS characteristics					
System					6hrs predicted data
File size for data download		53		kB	1 week prediction data
Maximum prediction time	7	14		days	
TTFF		1		sec	Time and last position available
TTFF		15		sec	Last position available

Datasheet V1.4

3.8 EASY™ self generated prediction data feature

Note: The EASY functionality is only supported, if "VBACKUP" pin is connected and the NMEA update rate is 1Hz.



T1 = 100ms T2 = 1sec

© GNS-GmbH 2012
V 1.4, Apr 2nd 2013

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

PPS characteristics based upon a 3D-fix					
1PPS pulse duration	-	100	-	msec	
1PPS time jitter	-	10		nsec RMS	Pulse rising edge deviation from expected pulse time, measured with full 3D fix
1PPS rise and fall time		5		nsec	10%..90%, load is 10k 5pF

3.10 SBAS (Satellite Based Augmentation) support

GNS1301 supports Satellite Based Augmentation for improvement of the navigation precision. Correction data is sent from geostationary satellites to the GPS receiver. GNS1301 supports European, US, and Asian augmentation systems (EGNOS, WAAS, QZSS, GAGAN, MSAS) to enable precision improvements in nearly every region of the world.

SBAS is active by default and will automatically track the available SBAS satellites. It can be disabled by NMEA command. See document *GNS1301NMEACommandInterface* for details.

Note : In SBAS mode, the maximum fix rate is limited to 5 per second.

3.11 DGPS (Differential GPS) support

GNS1301 accepts DGPS input in RTCM format. DGPS provides precision position fixes down to centimetres and is used in professional applications like agriculture. The second UART (UART_B) of the module is used to feed the data in. DGPS is deactivated by default. For configuration of the UART port, some NMEA commands must be implemented. See *GNS1301NMEACommandInterface* document for details.

Note : Since SBAS and DGPS both do (different) corrections on the fix position solution, they cannot be used at the same time! SBAS / DGPS usage is programmed through the NMEA Interface.

3.12 Single sentence output

GNS1301 allows to reduce data transfer to host to a minimum. Reduced data transfer can save host processor activity times and thus reduce system power consumption. All relevant information will be provided in a single sentence output. To save further channel load, the sentence can be formatted as binary.

3.13 Last position retention

Depending on the application, it might be useful to retain the last position or to clear the position when having no fix solution. When enabled, the last known position is outputted in the NMEA sentences.

3.14 Geofencing function

GNS1301 has an internal algorithm to determine whether the actual position is within a circular area around a predefined location point. A proprietary sentence indicates the "inside" or "outside" status.

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

3.15 Distance calculation feature

This feature allows to request the real "line of sight" distance in relation to a predefined position. This feature can remove some load from the host processor.

3.16 Magnetic variation feature

As the magnetic variation feature is enabled, data output provides informations about the degree of magnetic variation and the measured magnetic heading.

3.17 GPS almanac and ephemeris data

For quick re-acquisition of the GPS after off-times, the GPS engine should have access to almanac and ephemeris data. This data is permanently stored inside GNS1301 module, even if all power supplies have been removed. When the GPS is powered-up again, the data will be used to allow a quick re-acquisition, as soon as a coarse time information is available. Time will be available immediately, when RTC is kept running.

3.18 Real time clock (RTC)

GNS1301 has a real time clock with 32,768Hz crystal onboard. As long as VBACKUP is connected to a power source, the real time clock and the module memory can be kept alive at very low power consumption of just 7uA. The RTC will track the current time and enable the module to start from sleep states with very fast time to first Fix (TTFF).

3.19 UART interface

GNS1301 core and I/O sections work at 3.3V nominal. Absolute Maximum Ratings should not be exceeded. Should the GNS1301 be interfaced to a host with I/O at higher/lower levels, level shifters should be used. UART baud rate is 9600baud by default. The baud rate can be modified to higher rates by a NMEA software command. See document *GNS1301NMEACommandInterface manual* for details.

GPS UART Default Settings	
Parameter	Value
Baud rate	9600
Data length	8 bits
Stop bit	1
Parity	None

3.20 Module default settings

The 1301 module comes with default settings, which are persistently programmed. Whenever power is removed from the module (both Vcc and VBACKUP), the settings will be reset to the values shown in the following table.

GPS & GLONASS module GNS 1301

Datasheet V1.4


confidential information preliminary specification

Default settings	
Setting	Default value
UART setting	9600,8,N,1
Fix frequency (update rate)	1/sec
NMEA sentences	\$GPRMC,\$GNGSA,\$GPGSV,\$GLGSV,\$GPVTG,\$GPGGA
NMEA rate	Once a second: RMC,GSA,VTG every 5 sec :GSV sentences
Self survey prediction mode: EASY™	enabled
Active interference cancellation:MTAIC	enabled
DGPS option	SBAS enabled
Datum	WGS 84
PPS pulse output length	100ms
Logging parameters	Full&Stop / Content Basic / Interval 15 sec
Single sentence output	Customized firmware needed
Last position retention	Customized firmware needed
Magnetic variation	Customized firmware needed
Geofencing function	Customized firmware needed
Distance calculation feature	Customized firmware needed

On request, other options can be selected as preprogrammed (persistent default) options.
 Please contact the GNS support for your project requirements.
 Note : Customized options are solely available for fixed order lots.

4 TYPICAL APPLICATION BLOCK DIAGRAM

4.1 Typical System overview

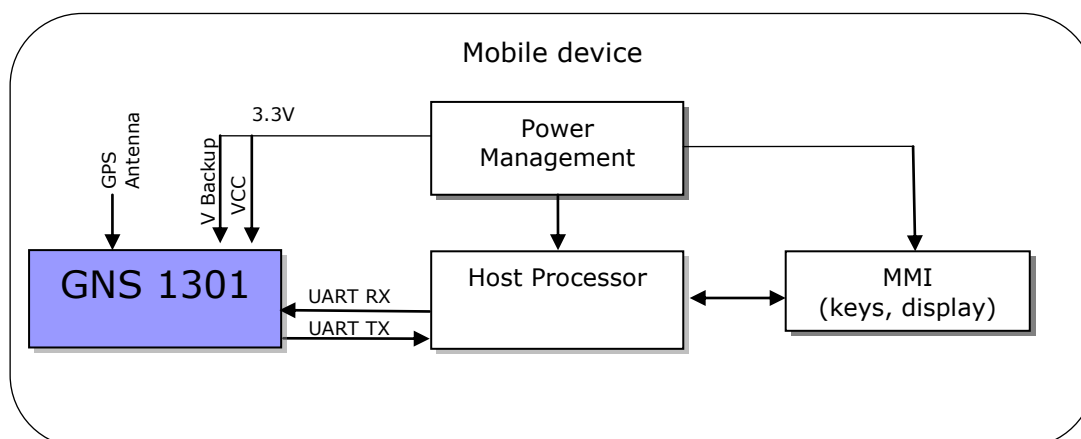

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

5 GNSS characteristics

5.1 GNSS characteristics

Parameter	Min	Typ	Max	Unit	Note
general					
Frequency		1575.42		MHz	GPS L1
		1598.0625~ 1609.3125		MHz	GLONASS L1
		1575.42		MHz	GALILEO E1 L1
SV Numbers					GPS #1~32 GLONASS #65~96 GALILEO #201~253*
DGPS					SBAS[QZSS,WAAS,EGNOS, MSAS,GAGAN], RTCM
AGPS					Internal processing of predicted orbit data. Service available via ftp. 6hrs prediction interval
Output data frequency	1/10	1	10	1/sec	Configurable
Navigation&tracking sensitivity		-165	-167	dBm	
Acquisition sensitivity		-148		dBm	autonomous
TTFF hotstart		<1		sec	All SVs @-130dBm
TTFF autonomous cold start		34		sec	All SVs @-130dBm
Number of channels tracking		33			
Number of acquisition channels		99			
Dimension		11.5x13x2.1		mm ³	Tolerance is 0.2 mm
Weight		1		g	
Power consumption					
GPS/GLONASS ACTIVE (acquisition)		35*		mA	NMEA frequency = 1/sec*,SBAS enabled, MTAIC enabled
GPS/GLONASS ACTIVE (tracking)		22*		mA	NMEA frequency = 1/sec*, SBAS enabled, MTAIC enabled
Backup current @ 3V		15		μA	

*note: further power savings are possible using AlwaysLocate or periodical modes. Actual possible savings depend on use cases.

Accuracy					
Position error CEP50	-	3	-	m	Without aid
Position error CEP50	-	2.5	-	m	Using (SBAS)
Velocity error	-	0.1	-	m/s	Without aid
velocity error	-	0.05	-	m/s	Using (SBAS)

ITAR limits					
Operation altitude		-	18,000	m	
Operation velocity	-	-	515	m/s	
Operation acceleration	-	-	4	G	

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

6 DESIGN GUIDELINES

6.1 General

Although GNS1301 GPS&GLONASS module provides best performance at low power consumption, special care should be taken to provide clean signal and clean power supplies. A multi layer carrier board with solid power- and ground planes is recommended. Power lines should be blocked near to the module with low ESR capacitors.

Radiated noise from neighbour components may also reduce the performance of the module. Special care must be taken when designing the RF input tracks and antenna connection.

6.2 GPS and GLONASS antenna

GNS1301 contains all input circuitry needed to connect a passive antenna directly. A special GNS & GLONASS antenna that covers both frequencies must be chosen.

If there is a long wire between GNS1301 RF input and antenna, there should be an LNA (on the antenna side) to compensate for cable losses ("active" antenna).

The module is already prepared for connecting an active antenna. DC injection and DC decoupling from RF input is already onboard. Please connect a suitable power supply to pin3 (VANT). The power supply voltage should match the active antenna specified voltage. The current flowing from pin 3 to the antenna should be maximum 30mA. In many cases, pin3 can be directly connected to Vcc (pin16).

More information about connecting and implementing a GNSS antenna to an application PCB, please refer to *GPS Antenna Design Guide.pdf*.

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

7 ELECTRICAL SPECIFICATION

7.1 Absolute Maximum Ratings

Parameter	Value	Unit
Supply voltage range: V _{cc}	-0.5 to 4.3	V
Backup voltage: V _{BACKUP}	-0.5 to 4.3	V
Input voltage to analog pins	-0.5 to 3.3	V
Input voltage to all other pins	-0.5 to V _{cc}	V
Operating ambient temperature range	-40 to +85	°C
Storage temperature range	-40 to +85	°C

7.2 Recommended Operating Conditions

Parameter	Min	Typ	Max	Unit	Note
V _{cc}	3.0	3.3	4.3	V	supply voltage
V _{BACKUP}	2.0	3.0	4.3	V	Backup voltage for RTC and memory retention, must be available during normal operation
High level output voltage V _{OH}	0.8 * V _{cc}		V _{cc}	V	
Low level output voltage V _{OL}	0		0.2*V _{DD}	V	
High-level input voltage V _{IH}	0.80* V _{cc}		V _{cc}	V	
Low-level input voltage V _{IL}	0		0.35* V _{cc}	V	
Operating temperature	-40		85	°C	Full specified sensitivity

7.3 GPS/GLONASS input characteristics

Parameter	Min	Typ	Max	Unit	Note
Maximum input level	0			dBm	
Input return loss		-6.5		dB	


GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

8 DEVICE PINOUT DIAGRAM

8.1 Pin configuration

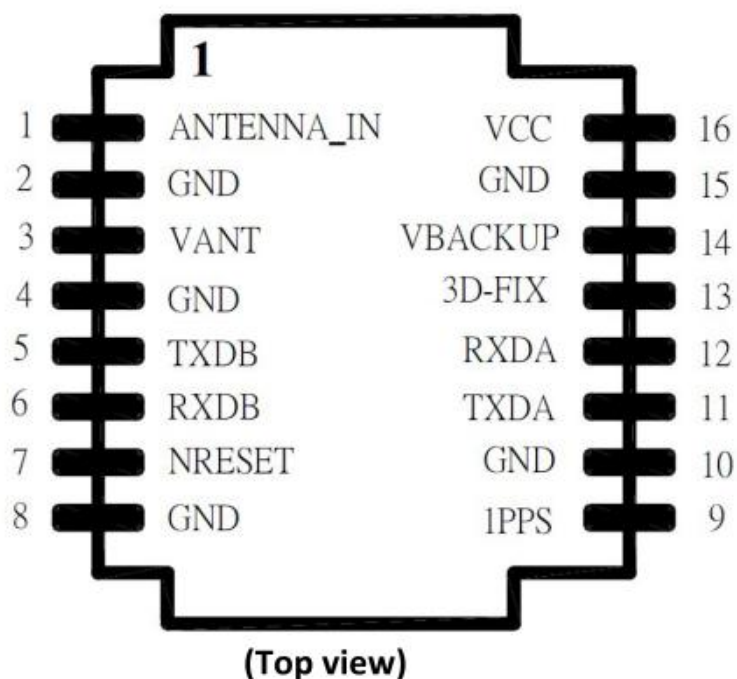

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

8.2 Pin assignment

Pin	Name	I/O	Description & Note
1	Antenna_IN	I	Antenna Signal Input This is the GNSS RF signal input pin, which can be connected to a passive antenna or an active antenna.
2	GND	p	Ground
3	VANT	P	External Antenna power input The power supply input for external active antenna. The input voltage should be kept from 2.5V to 5V. DC current <=30mA.
4	GND	P	Ground
5	TXDB	O	Serial Data Output This is the UART-B transmitter of the module. It is used for customization by firmware. If not used, keep floating
6	RXDB	I	Serial Data Input for DGPS RTCM data streaming This pin receives DGPS data of RTCM protocol (TTL level), if not used keep floating.
7	NRESET	I	Reset Input, Low Active Low active, it causes the module to reset. If not used, keep floating.
8	GND	P	Ground
9	1PPS	O	1PPS Time Mark Output 2.8V CMOS Level This pin provides one pulse-per-second output from the module and synchronizes to GPS time. Keep floating if not used.
10	GND	P	Ground
11	TXDA	O	Serial Data Output A for NMEA output (TTL) This is the UART-A transmitter of the module. It outputs GPS information for application.
12	RXDA	I	Serial Data Input A for Firmware update (TTL) This is the UART-A receiver of the module. It is used to receive commands from system
13	3D_FIX	O	3D-Fix Indicator The 3D_FIX is assigned as a fix flag output. If not used, keep floating. Before 2D Fix The pin will continuously toggle with 0.5 Hz. output one second high-level and one-second low-level signal After 2D or 3D Fix The pin will continuously output low-level signal This pin may not connected to high-level at power-on sequence.
14	VBACKUP	P	Backup power input for RTC & navigation data keep This connects to the backup power of the GPS module. Power source (such as battery) connected to this pin will help the GPS chipset in keeping its internal RTC running when the main power source is turned off. The voltage should be kept between 2.0V~4.3V, Typical 3.0V. If VBACKUP power was not reserved, the GNSS module will perform a lengthy cold start every time it is powered-on because previous satellite information is not retained and needs to be re-transmitted. This pin must be connected for normal operation..
15	GND	P	Ground
16	VCC	P	Main DC power input The main DC power supply for the module. The voltage should be kept between from 3.0V to 4.3V. The ripple must be limited under 50mVpp (Typical: 3.3V).

(1) I = INPUT; O = OUTPUT; I/O = BIDIRECTIONAL; P = POWER PIN; ANA = ANALOG PIN.

GPS & GLONASS module

GNS 1301

Datasheet V1.4

confidential information preliminary specification

9 NMEA DATA interface

GNS1301 provides NMEA (National Marine Electronics Association) 0183 compatible data. A set of proprietary NMEA commands are available to send control messages to the module. These commands are described in a separate document: *GNS1301NMEACOMMANDINTERFACE manual*. For standard operation, no commands are needed; the module will start outputting NMEA sentences after power supply has been attached. GNS1301 will always start communication output with 9600 bit per second.

If non standard options are needed (f.e. other baud rate , other NMEA sequence) they can be programmed from host controller during runtime.

Important note : options set by using NMEA command interface are not persistent! They will be lost when power is removed. A backup supply at VBACKUP will be sufficient to keep them.

9.1 NMEA output sentences for GPS and GLONASS

NMEA output sentences	
Type	content
Common sentences	
RMC	Recommended Minimum Navigation Information
GGA	Fix Data, Time, Position and fix related data for a GPS receiver
GLL	Geographic Position - Latitude/Longitude
GSA	GLONASS DOP and active satellites
VTG	Course and Speed Information relative to the Ground
GSV	Satellites in view

NMEA output sentences identifier, related to its GNSS system:

NMEA output identifier					
System	GGA	GSA	GSV	RMC	VTG
GPS	GPGGA	GPGSA	GPGSV	GPRMC	GPVTG
GPS+GLONASS	GPGGA	GNGSA	GPGSV GLGSV	GPRMC ¹ or GNRMC	GPVTG

Note1: Before 3D fix RMC output is GPRMC, after 3D fix it changes to GNRMC.

For more informations, please refer to the **NMEA protocol** document, available at the GNS forum: www.forum.gns-gmbh.com.

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

9.2 NMEA command interface

GNS1301 NMEA command interface allows to control settings and the extended functions. The command interface specification is available in an extra document:

GNS1301NMEACommandInterface manual.

Two groups of commands are available:

Setting commands do modify the behavior of the module.

Note : modified settings will be valid as long as the module is powered through Vcc or VBACKUP. (f.e. : setting of a new baud rate). After removing Vcc and VBACKUP, all settings are reset to their default values.

Action commands will perform the specified action one time after the command has been received. (f.e. : request for cold start)


Commands are always started with \$PTMK, directly followed by the command number 000..999.

Each command must be terminated by * <checksum> and a <CR><LF>.

The checksum calculation is simple, just XOR all the bytes between the \$ and the * (not including the delimiters themselves). Then use the hexadecimal ASCII format.

TOP VIEW

all units in mm, tolerance is $\pm 0.2\text{mm}$




GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

11 RECOMMENDED PAD LAYOUT

TOP VIEW
all units in mm

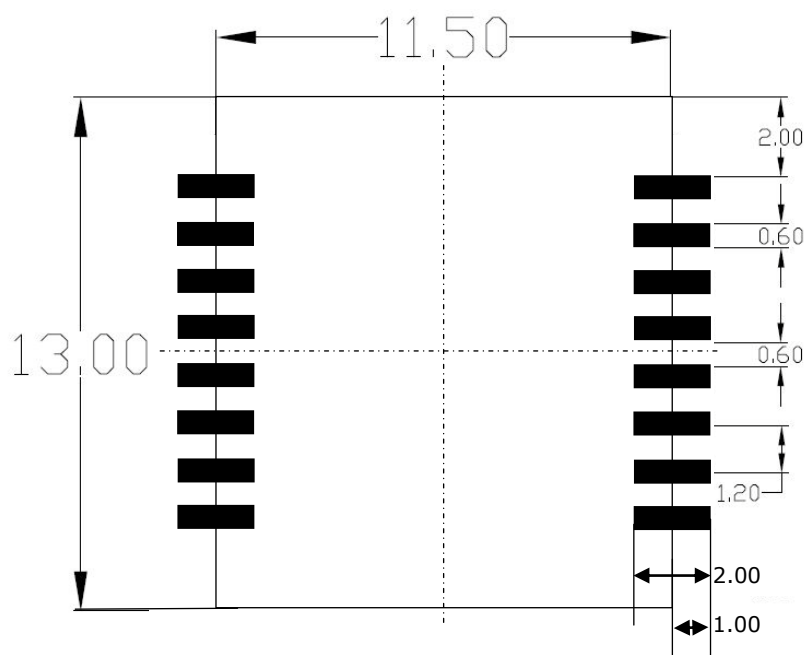

GPS & GLONASS module GNS 1301


Datasheet V1.4

confidential information preliminary specification

12 MATERIAL INFORMATION

Complies to ROHS standard
 ROHS documentations are available on request
 Contact surface: gold over nickel

13 RECOMMENDED SOLDERING REFLOW PROFILE

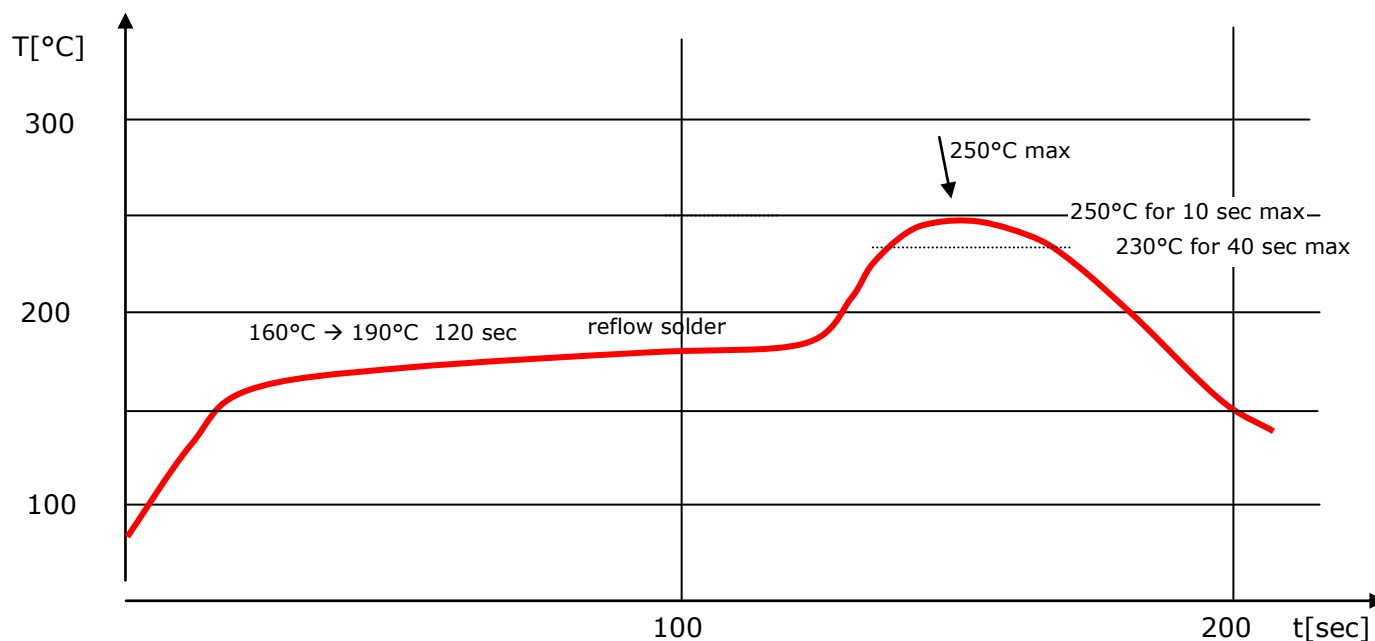

Notes:

1. GNS1301 should be soldered in upright soldering position. In case of head-over soldering, please prevent shielding / GNS1301 Module from falling down.
2. Do never exceed maximum peak temperature
3. Reflow cycles allowed : 1 time
4. Do not solder with Pb-Sn or other solder containing lead (Pb)
5. This device is not applicable for flow solder processing
6. This device is not applicable for solder iron process

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification


14 TRAY PACKAGE INFORMATION

The GNS1301 are placed on a tray for quantities below 100 pieces. The trays will be stacked and packed together. The trays are placed inside an antistatic bag.



15 TAPE&REEL INFORMATION

Tape information:

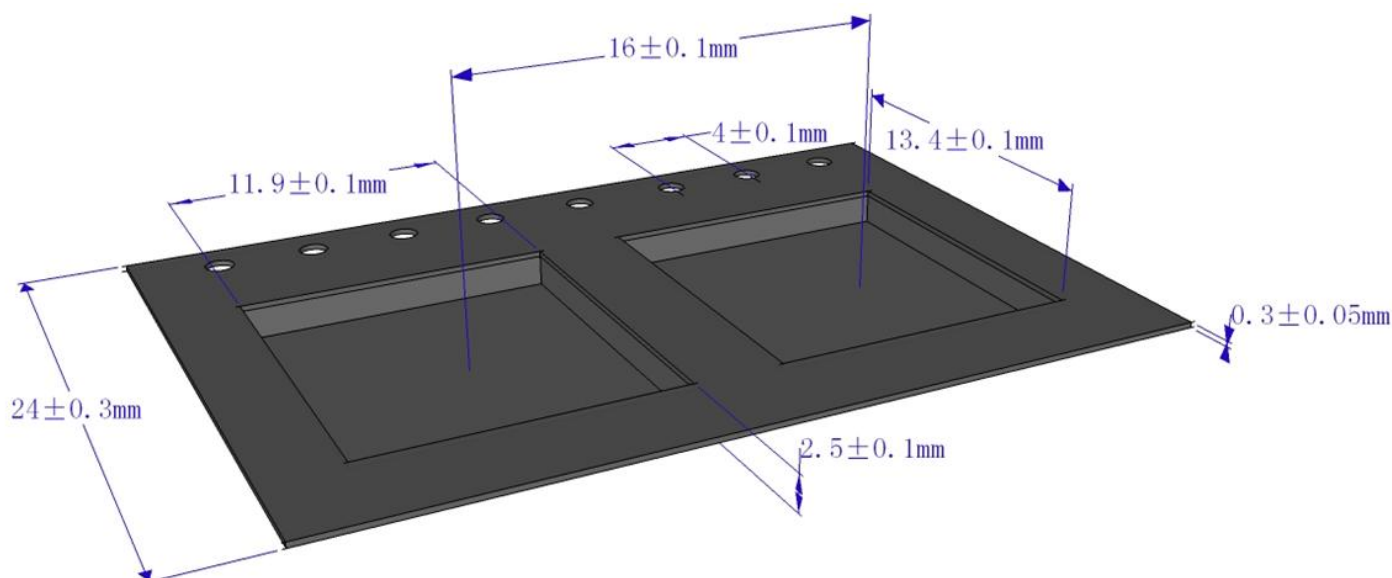


GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification


Reel information:

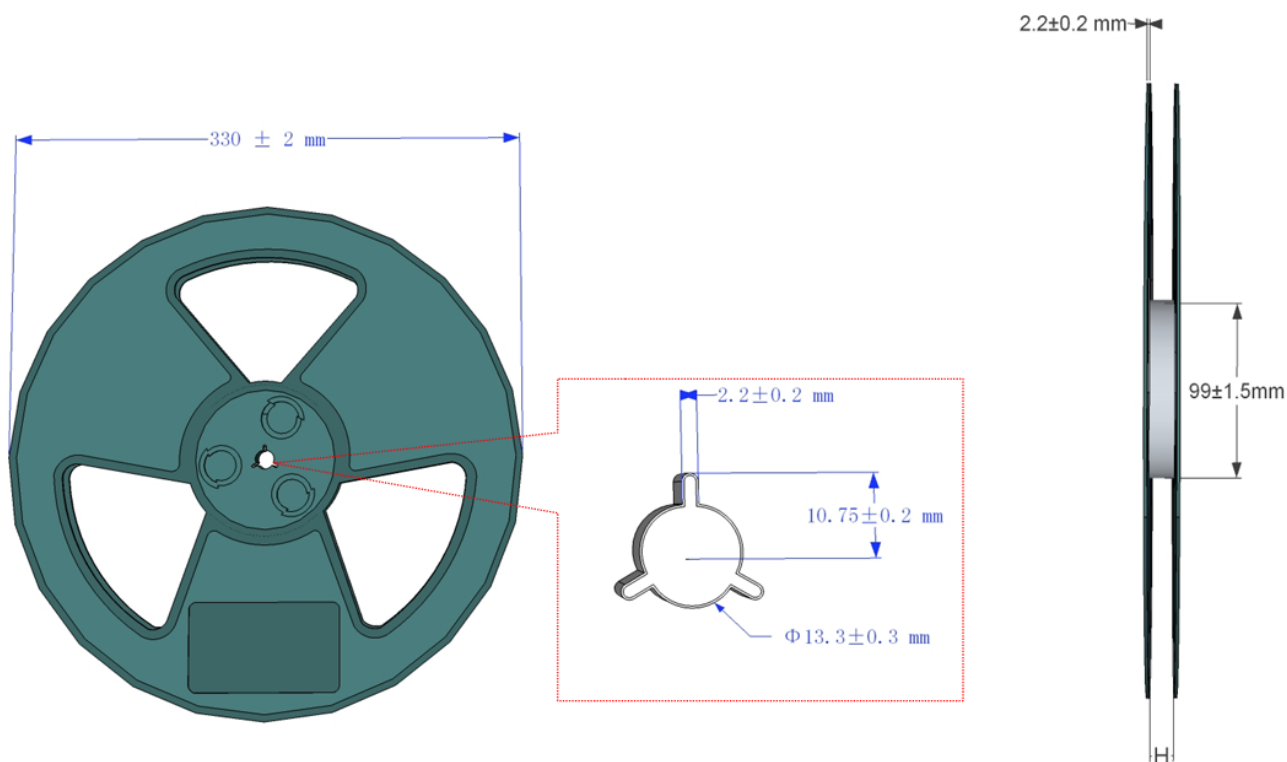

H= 24.5mm

Number of devices: 1000pcs/reel

16 ORDERING INFORMATION

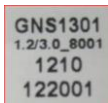Ordering information			
Type	Part#	label marking	Description
GNS1301	4037735104761	 <p> GNS1301 1.2/3.0_8001 1210 122001 </p>	GNS1301 GPS&GLONASS GNSS module

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

17 FCC AND CE COMPLIANCE

This product has passed FCC and CE tests successfully. The module emission and immunity has been proven to be compliant.

However, applications using this module as a component must pass CE and/or FCC again in whole.

18 ENVIRONMENTAL INFORMATION

This product is free of environmental hazardous substances and complies with 2002/95/EC. (RoHS directive).



19 MOISTURE SENSITIVITY

This device must be prebaked before being put to reflow solder process.

Disregarding may cause destructive effects like chip cracking, which leaves the device defective !

Shelf life	6 months , sealed
Possible prebake recommendations	12 hrs @ 60°C
Floor life (time from prebake to solder process)	<72 hrs

20 DOCUMENT REVISION HISTORY

Version	Date	Author	Description
V0.01	Jul 12 2012	P.Skaliks	initial , internal , not published
V1.0	Oct 29 2012	P.Skaliks	Initial preliminary release
V1.1	Nov 29 2012	M.Reiff	Standard baudrate modified, System block diagram added, Tray package information added
V1.2	Mar 01 2013	M.Reiff	Tracking power consumption corrected; NMEA output identifier table added; External GPS/GLONASS active antenna maximum DC current corrected; Tape&Reel information added.
V1.3	Mar 13 2013	M.Reiff	PPS direction at blockdiagram corrected;Tape&Reel information changed;
V1.4	Apr 2 2013	M.Reiff	Backup current corrected; Related documents updated;

GPS & GLONASS module GNS 1301

Datasheet V1.4

confidential information preliminary specification

21 RELATED DOCUMENTS

Title	Description / File	Available from
<i>GPS Antenna Connection Design Guide</i>	Design Guide to implement an GPS antenna to an application PCB	www.forum.gns-gmbh.com
<i>GNS1301NMEAcommandInterface</i>	Detailed description of NMEA commands	www.forum.gns-gmbh.com
<i>GNS1301 StarterKit user manual</i>	User manual for the GNS1301 receiver based evaluation kit	www.forum.gns-gmbh.com
<i>NMEA protocol</i>	Detailed description of NMEA protocol	www.forum.gns-gmbh.com

© GNS GMBH 2012

THE INFORMATION IN THIS DOCUMENTATION DOES NOT FORM ANY QUOTATION OR CONTRACT. TECHNICAL DATA ARE DUE TO BE CHANGED WITHOUT NOTICE.

NO LIABILITY WILL BE ACCEPTED BY THE PUBLISHER FOR ANY CONSEQUENCE OF THIS DOCUMENT'S USE.

REPRODUCTION IN WHOLE OR IN PART IS PROHIBITED WITHOUT THE PRIOR WRITTEN CONSENT OF THE COPYRIGHT OWNER